


Instructions for Slipover Ruger #1 Scope Base

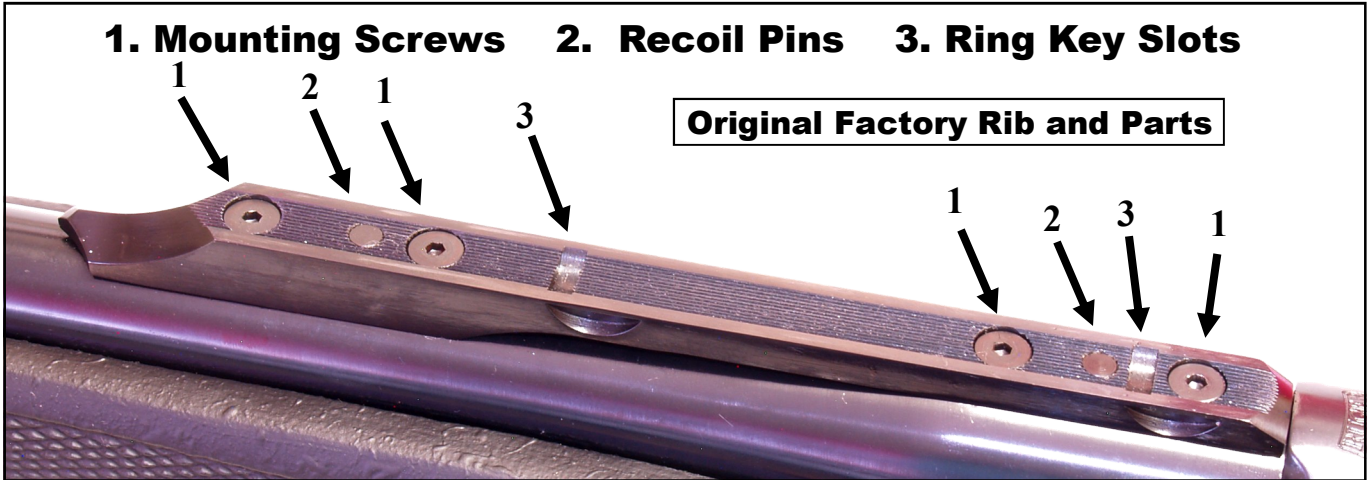

Remove the four Mounting Screws while leaving the rib in position along with the Recoil Pins.



Position the Slip-Over Base on top of the Rib so the screw holes line up with the original Rib screw holes.

Install Allen Head screws... Long ones in front, short ones in rear (two different sets for rear are included - Use best fit). Then, adjust set screws down into contact with the original ring key slots.

